

QUICK  
START  
GUIDE

 

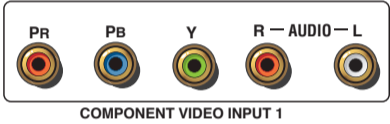 
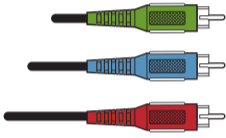 
 


 


 


www.rca.com/television

# Choose Your Connections

Make your connection decision easier by taking a few minutes to review the jacks on your new TV. Compare the jacks on the device you want to connect and see if the same jacks are available on your TV. Then refer to the chart below to determine the best connection to make.

For more information about connecting your TV to other devices, refer to Chapter 1 of the User's Guide. Make sure you read the safety information provided at the beginning of the User's Guide before you connect and operate your TV.

Jacks	Quality	Connects to...	Cables needed (not included)
	★★★★	Devices with an HDMI™ output, such as Satellite Receivers and Cable Boxes	 HDMI
	★★★	Devices with Y Pb Pr (component) outputs, such as Satellite Receivers, Cable Boxes, DVD-PVRs, and DVD Players	 Component Video  Audio
	★★	Devices with S-Video or Video (composite) outputs, such as DVD Players, VCRs, Satellite Receivers, and Cable Boxes	 S-Video  Audio
	★		 Video  Audio

1

# Connect a Signal Source

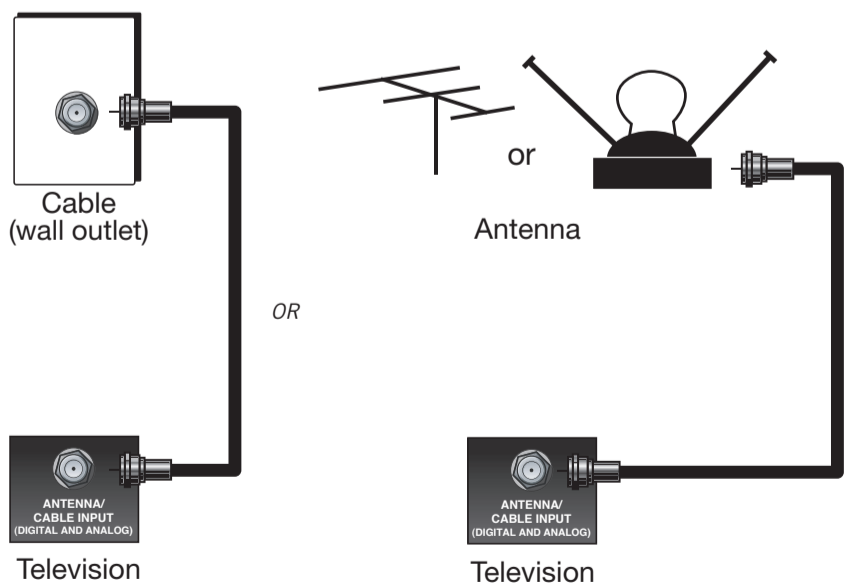


fig.1 OR fig.2

Connect cable or antenna to your TV's ANTENNA/CABLE INPUT in order to receive TV channels. Connect the cables as shown in fig.1 or fig.2.

*Note: If you have regular cable, your TV is able to receive some digital channels because it has a capability called QAM. QAM is a tuner that enables reception of unscrambled digital cable content. Check with your cable provider for information about content availability in your area. Refer to Step 3 Operate Your TV for information on viewing digital channels.*

If you're connecting a cable box or satellite receiver use the chart above to help determine which jacks to use for the best connection. Your cable box or satellite receiver needs to be high definition if you want to receive high definition programming. Check with your cable provider for more information.

Continue to Step 2, *Set Up Your TV*, on the back page.

# 2

## Set Up Your TV

**Make sure you have already** connected your TV to devices and a signal source, plugged in the TV, and put batteries in the remote.

**Now**, turn on the TV and start the setup.



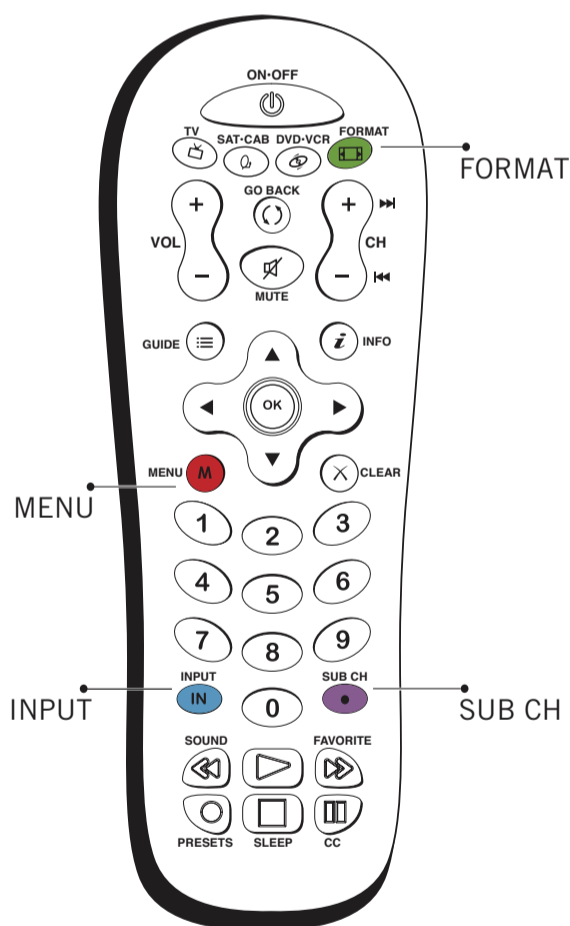
- **Set the Menu Language.** If English is your preferred language, skip this step and go to *Set the Signal Source*. To choose another language, press the MENU button, then press the right arrow button to enter the *Setup* menu. Press the down arrow to highlight *Menu Language*, then press the right arrow to choose a language.

- **Set the Signal Source.** From the Setup menu, press the up or down arrow button to highlight *Signal Source*. If you connected Cable to your ANTENNA/CABLE INPUT, the option is chosen for you and you can press the down arrow button to highlight *Auto Channel Search*. If you connected Antenna to your ANTENNA/CABLE INPUT, press the right arrow button to choose *Antenna*, and then press the down arrow button to highlight *Auto Channel Search*.

- **Search Channels.** With *Auto Channel Search* highlighted, press OK to begin the channel search. The menu shows the TV is running a channel search. Your TV tunes to a channel once the search is complete. Go to Step 3, *Operate Your TV*, for more information.

# 3

## Operate Your TV



### Using the Menu System

To access the menu system, press the **MENU** button. Use the up or down arrow buttons to scroll up or down; left or right arrow buttons to scroll left or right, or to display submenus; and OK to change selections. Press MENU to exit a menu and go to the previous menu.

### Watching TV

#### Changing Channels

- If you have both analog and digital cable channels these are put into the same channel list. As you change channels, look at the top right corner of the screen to see what type of channel you're viewing. Digital channels display a D as part of the channel, such as *D Ch 29.1*, while analog channels display an A as part of the channel, such as *A Ch 9*.
- Depending upon the type of signals you have connected to your HDTV, you might notice the channels change slower than you're used to. This is perfectly normal. Digital channels sometimes take longer to tune.

#### Entering Channel Numbers

To tune to a channel, enter the channel number and press OK or wait a few seconds for the channel to tune. Digital channels can have both primary channels (like the analog channel number) and subchannels. If 6 is the primary channel and 1 is the subchannel, for example, the channel looks like *6.1* on screen. To tune to a digital channel with a subchannel, such as 6.1, enter the primary channel number (6), then press the **SUB CH** button. Enter the subchannel number (1) and press OK.

#### Changing Screen Formats

Your TV allows you to change the format of the picture you're viewing by pressing the **FORMAT** button on your remote. The format changes as you press the FORMAT button and the format type is displayed at the top of the screen. Depending on the type of signal you're viewing and your TV's model, a different format might not be available.

#### Viewing Devices Connected to Your TV

To view devices connected to your TV, press the **INPUT** button to display the input list. Choose the input name that matches the input of the device you connected. Your choices are *Composite*, *S-Video*, *Composite (Side)*, *S-Video (Side)*, *Component 1*, *Component 2*, *VGA*, *HDMI 1*, and *HDMI 2*.