

 


## Software Upgrade for the 22 Series LCD TV


You will need a USB flash drive with at least 15 mb free space ..

To upgrade the software, follow the steps below.


1. On the USB drive, create a folder named **Upgrades**.
2. Copy the software file named **TTEDI\_L12.8.0o\_dev.upg** to the new folder on the USB drive.
3. Unplug the TV's power cord and plug the USB drive into the USB port of the TV.
4. Put the TV's remote control into the DVD mode by pressing the DVD button.
5. Hold down the OK button on the remote control while plugging the TV's power cord back in.
6. Once the green power indicator on the TV begins blinking, release the OK button.
7. The TV will turn on and display the following software upgrade screen.

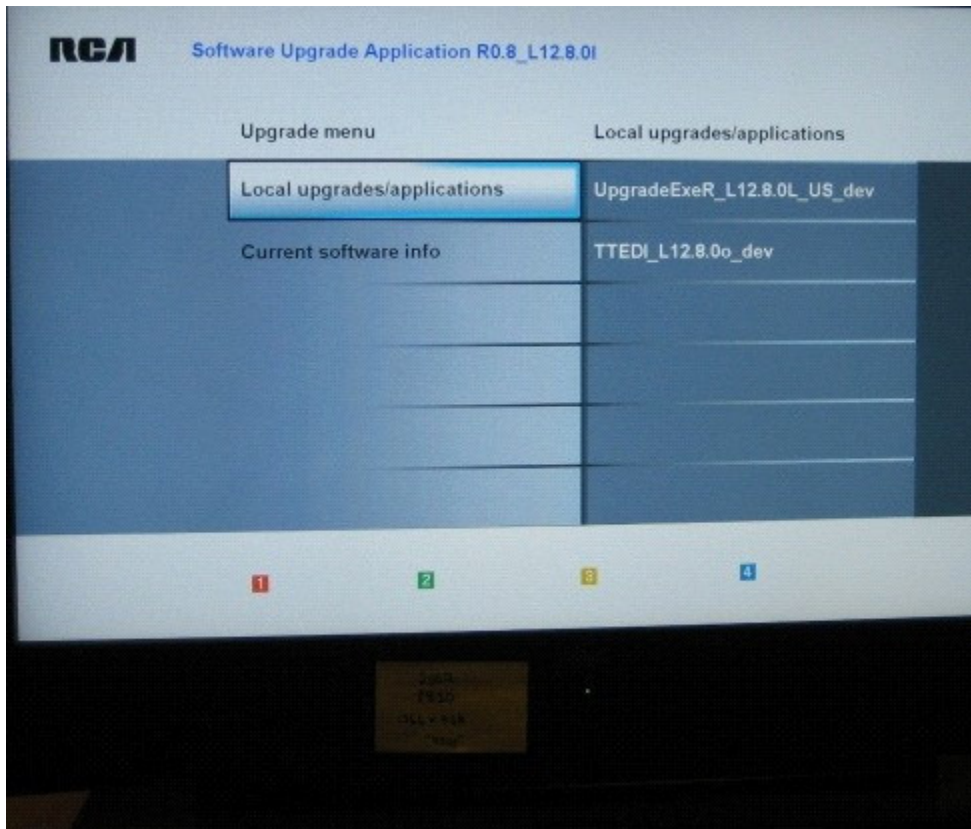

 8. Put the TV's remote control into the TV mode by pressing the TV button.
9. Using the arrow keys on the remote control, highlight the **TTEDI\_L12.8.0o.upg** file.
10. Press 1 to start the upgrade process
11. The TV will show a message saying 'You try to program software.... Do you want to continue?' – Press OK on the remote to answer yes.

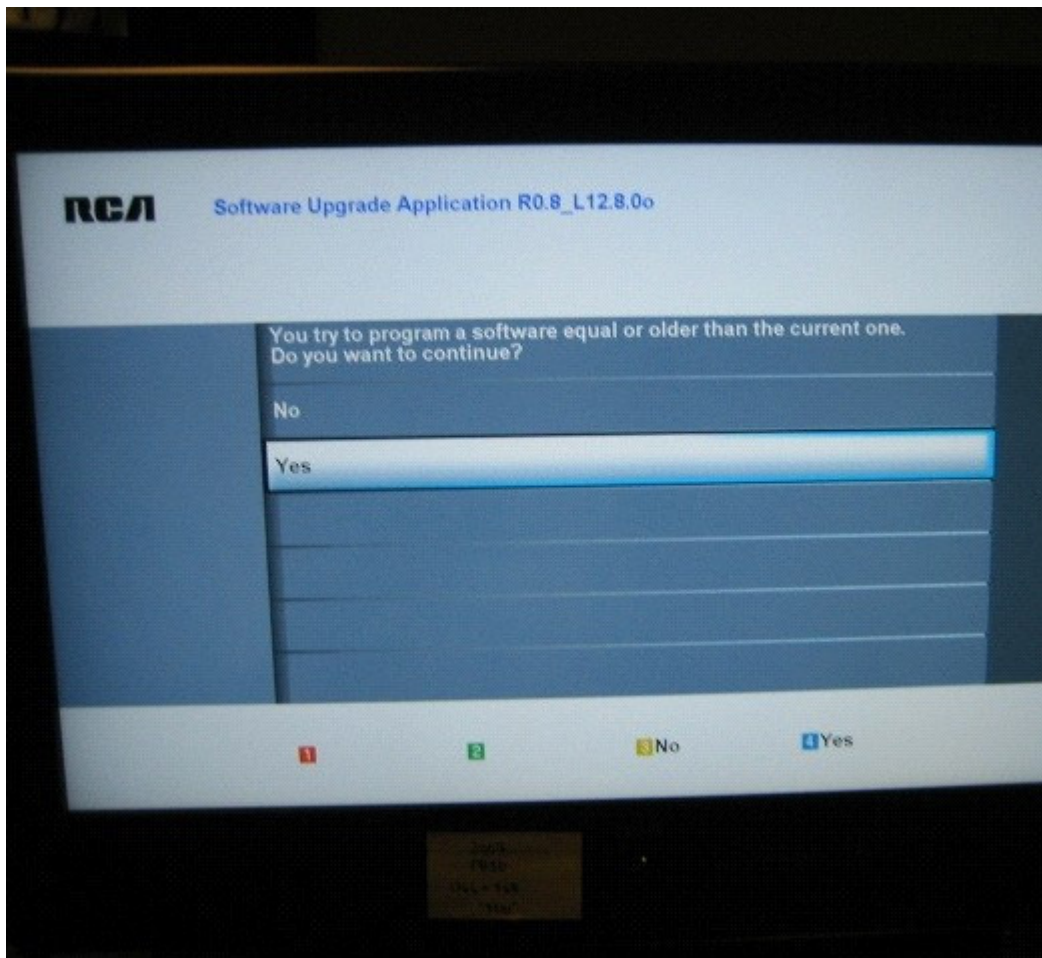

 12. The upgrade will start and when completed you will see the message – ‘Operation Successful! Remove all inserted media and restart the TV set.’ (See picture below)

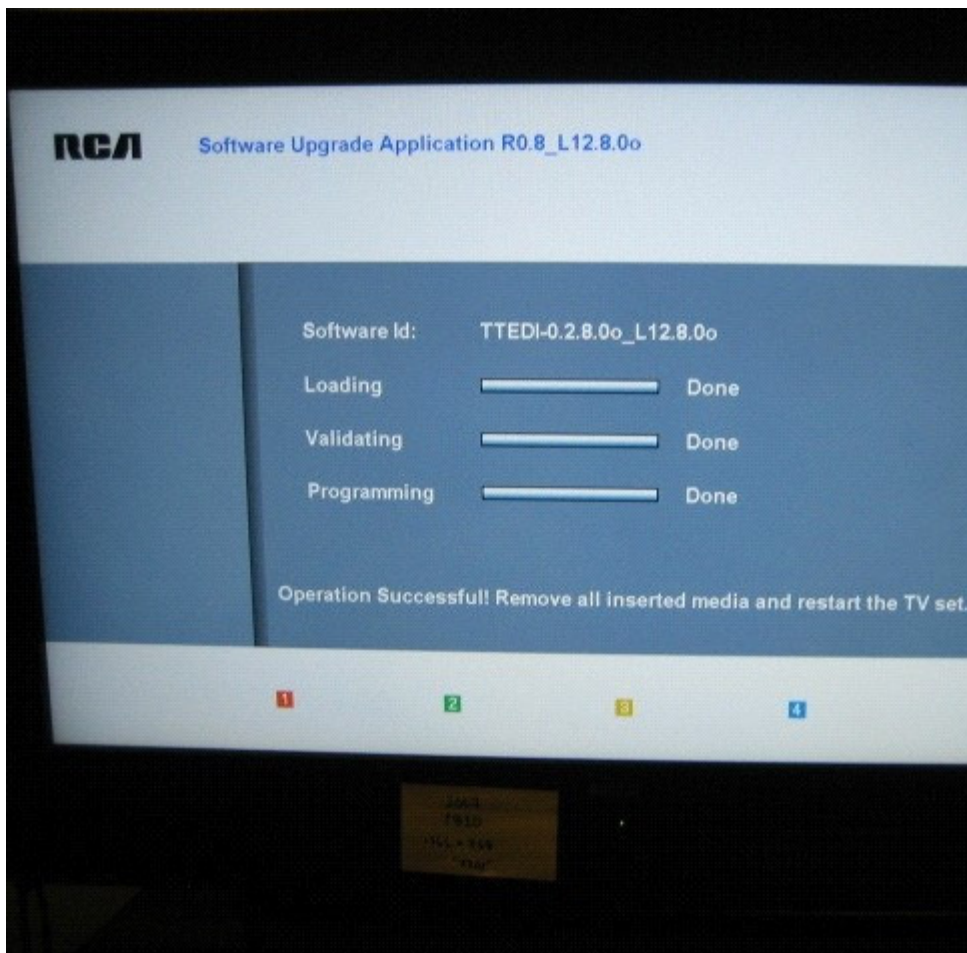

13. Remove the USB drive, unplug the TV power cord, then plug the power cord back in.
14. The TV should now turn on and be ready for use.