



## Software Upgrade for the 37, 38 & 380 Series LCD TV

 
You will need a USB flash drive with at least 15 mb free space ..

To upgrade the software, follow the steps below.


1. On the USB drive, create a folder named **Upgrades**.
2. Copy the software file named **TTE05-3.13.08.08\_522US\_software.upg** to the new folder on the USB drive.
3. Put the TV's remote control into the DVD mode by pressing the DVD button.
4. Unplug the TV's power cord.
5. Hold down the OK button on the remote control while plugging the TV's power cord back in.
6. Once the LED on the TV begins blinking, release the OK button.
7. The TV will turn on and display the following software upgrade screen.




8. Insert the USB drive into the the USB connector on the side of the TV.
9. Put the TV's remote control into the TV mode by pressing the TV button.
10. Using the arrow keys on the remote control, highlight the **TTE05-3.13.08.08\_522US\_software** file.

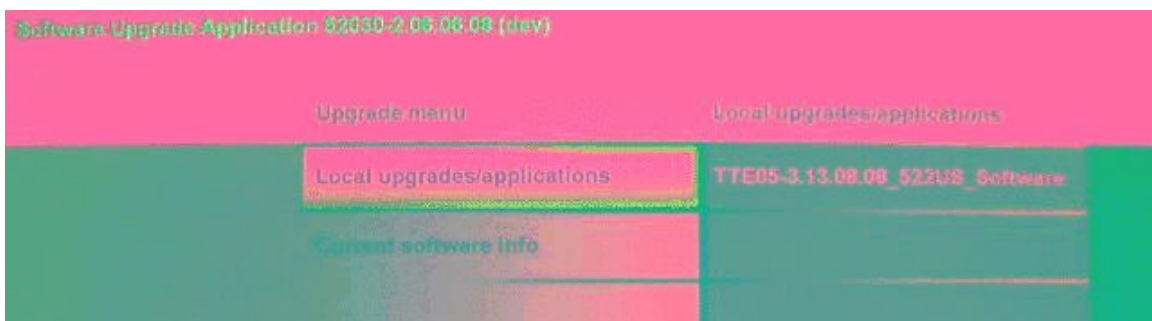

 11. Press OK to start the upgrade process
12. The TV will show a message saying 'You try to program software.... Do you want to continue?'

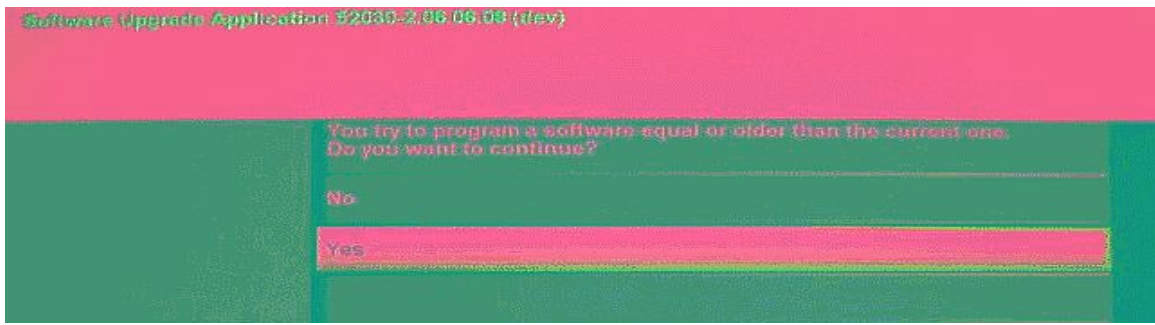

 13. Use the Down arrow key to select 'Yes' to continue with the software upgrade.
14. Press OK on the remote to answer yes.  
The software upgrade will begin. Wait until it completes. When completed you will see the message – 'Operation Successful! Remove all inserted media and restart the TV set.'

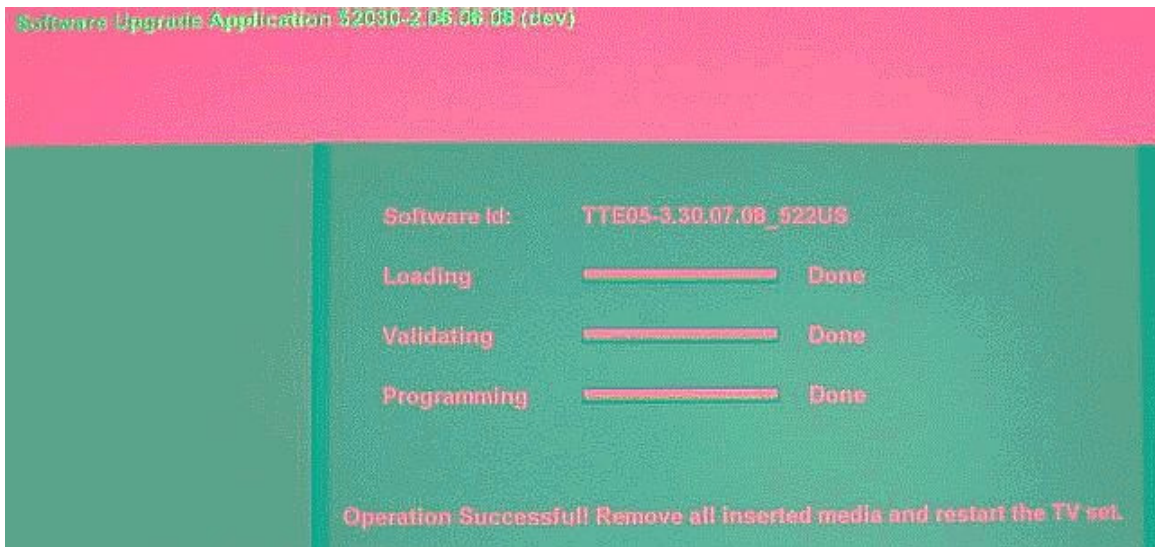

15. Remove the USB drive and unplug the TV power cord.
16. Wait 5 seconds then plug the TV's power cord back in.
17. The TV should now turn on and be ready for use.